

### PIARCO INTERNATIONAL NOTAM OFFICE

AIP SUPPLEMENT

Tele: 1 868 669-4128 1 868 668-8222 ext 2510 FAX: 1 868 669 1716 AFTN: TTPPYNYX Email:aimpublication@caa.gov.tt	TRINIDAD & TOBAGO CIVIL AVIATION AUTHORITY, P.O. BOX 2163, NATIONAL MAIL CENTRE, PIARCO REPUBLIC OF TRINIDAD AND TOBAGO	19/25 05 MAY 25
---	---	--------------------

AD

### **19. BARBUDA INTERNATIONAL AIRPORT (TAPB)**

#### AERODROME DATA UPDATED

Effective: 250505 to PERM

TAPB AD 2.20 Local Traffic Regulations has been amended.

Attachment A contains the updated Aerodrome data for the Barbuda International Airport (TAPB). New information is identified by a change bar symbol located at the left margin where the change has occurred.

AIP SUP 19/25 replaces AIP SUP 28/24

END

Intentionally left blank

### ATTACHMENT A

### AD 2. AERODROMES

### TAPB AD 2.1 AERODROME LOCATION INDICATOR AND NAME

### **TAPB - BARBUDA/Barbuda - INTL**

### TAPB AD 2.2 AERODROME GEOGRAPHICAL AND ADMINISTRATIVE DATA

1	ARP coordinates and site at AD	Lat : 173716N Long : 0614754W Site : Intersection of RWY and TWY centre lines		
2	Direction and distance from city	1.7NM SE of Codrington city center		
3	Elevation/Reference Temperature	8.6M (28FT) / 30.9 °C		
4	Geoid Undulation/Location	-42.6M (-139.7FT) / RWY 28 THR		
5	MAG VAR/Annual change	15°W (2024) /0° 2' W per year		
6	AD Administration, address, telephone, telefax, e-mail	Antigua and Barbuda Airport Authority Chief Executive Officer, V.C. Bird International Airport Coolidge St. George's Antigua and Barbuda TEL: (268) 484-2300, 484-2308 FAX: (268) 484-2340, 484-2346 E-MAIL: info@abairportauthority.com		
7	Types of traffic permitted (IFR/VFR)	IFR/VFR		
8	Remarks	NIL		

### TAPB AD 2.3OPERATIONAL HOURS

1	AD Administration	Refer to AD CEO V.C. Bird International Airport, Antigua
2	Customs and Immigration	1000 - 2200
3	Health and Sanitation	NIL
4	AIS Briefing Office	NIL
5	ATS Reporting Office (ARO)	NIL
6	MET Briefing Office	H24
7	ATS	NIL
8	Fuelling	NIL
9	Handling	1000 - 2200
10	Security	1000 - 2200
11	De-icing	NIL
12	Remarks	Aerodrome operational from sunrise to sunset. Contact agencies at Barbuda International Airport at (268) 484-2399 or <u>boclist@abairportauthority.com</u> to arrange the above services.

### TAPB AD 2.4 HANDLING SERVICES AND FACILITIES

1	Cargo-handling facilities	By arrangement with operators
2	Fuel/Oil types	NIL
3	Fuelling facilities/capacity	NIL
4	De-icing	NIL
5	Hangar Space for visiting aircraft	NIL
6	Repair facilities for visiting aircraft	NIL
7	Remarks	Corporate and private operators requiring handling services must proceed to the west apron and request the services of the FBO. See AD 2.20

#### TAPB AD 2.5PASSENGER FACILITIES

1	Hotels	Guest Houses
2	Restaurants	In the City
3	Transportation	Taxis, Limousine Service, Car Rentals
4	Medical facilities	First Aid treatment at AD Hospital 3 KM (1.8 NM) from airport
5	Bank and Post Office	In the City. Closed on Public Holidays.
6	Tourist Office	Tourism Office in the city, Tel: (268) 562 -7065/66
7	Remarks	NIL

### TAPB AD 2.6 RESCUE AND FIRE FIGHTING SERVICES

1	AD Category for fire fighting	AVAILABLE - Category 5	
2	Rescue equipment	1 Ambulance, 1 Pick-up, 1 Tender	
3	Capability for removal of disabled aircraft	By arrangements with airlines and local contractor	
4	Remarks	NIL	

### TAPB AD 2.7 SEASONAL AVAILABILITY - CLEARING

1	1 Types of clearing equipment		NIL
2	2	Clearance priorities	NIL
3	3	Remarks	AD available all seasons

1	Apron surface and strength	Type of surface: Asphalt Strength: PCR 226/F/B/X/T
2	Taxiway width, surface and strength	TWY A Width: 23 M (75FT) Type of surface: Asphalt Strength: PCR 226/F/B/X/T
3	ACL location and elevation	Location: Location 1 - Apron Stand 1, Elevation 6.7M (22FT) Location 2 - Apron Stand 2, Elevation 7.1M (23FT)
4	VOR Checkpoints	NIL
5	INS Checkpoints	NIL
6	Remarks	NIL

### TAPB AD 2.8 APRONS, TAXIWAYS AND CHECK LOCATIONS DATA

# TAPB AD 2.9 SURFACE MOVEMENT GUIDANCE AND CONTROL SYSTEM AND MARKINGS

1	Use of aircraft stand ID signs, TWY guide lines and visual docking/parking guidance system of aircraft stands	Taxiing guidance signs at intersection at holding position Guidance at Apron.					
2	Markings	RWY : Designator, THR, TDZ Centre line, End					
		TWY : Centre line, holding positions at TWY/RWY Intersections, Side stripes					
	Lights (LGT)	RWY : THR, Edge, End					
		TWY : Edge					
3	Stop bars	NIL					
4	Other runways protection measures	NIL					
5	Remarks	NIL					

### TAPB AD 2.10 AERODROME OBSTACLES

ID OBST/ Designation	OBST type	OBST Coordinate	ELEV/HGT	Markings/Type, Colour ofLight	Remarks
а	b	с	d	e	f
TAPBOB001	TWR	17 37 31.01N 061 48 26.70W	67.52M (222FT)	lighted red	TWR - New Airport
TAPBOB002	TWR	17 35 22.67N 061 48 58.61W	54.80M (180FT)	lighted red	TWR - Ferry Dock
TAPBOB003	TWR	17 38 26.89N 061 49 32.75W	45.92M (151FT)	lighted red	Cell TWR Codrington

#### Associated MET Office V.C. Bird MET Office 1 2 Hours of service H24 MET Office outside hours 3 Office responsible for TAF preparation V.C. Bird MET Office Periods of validity Type of landing forecast NIL 4 Interval of issuance Briefing/consultation provided NIL 5 Flight documentation 6 Language(s) used English 7 Charts and other information available for NIL briefing or consultation Supplementary equipment available for AWOS 3P 131.875MHZ 8 providing information ATS units provided with information 9 NIL (limitation of NIL Additional information 10 service, etc.)

### TAPB AD 2.11 METEOROLOGICAL INFORMATION PROVIDED

### TAPB AD 2.12 RUNWAY PHYSICAL CHARACTERISTICS

Designations RWY NR	TRUE & MAG BRG	Dimensions of RWY (M)	Strength(PCR and surface of RWY and SWY	f Coordinates/	THR elevation and highest elevation of TDZ of precision APP RWY	Slope of RWY-SWY
1	2	3	4	5	6	7
10	86.36° GEO 101.36° MAG	1859 x 30	PCR 226/F/B/X/ Asphalt	T 173713.97N 0614825.18W -42.4M	NA	+0.26%
28	266.36° GEO 281.36° MAG	1859 x 30	PCR 226/F/B/X/ Asphalt	T 173717.81N 0614722.24W -42.6M	NA	-0.26%
SWY Dimensions (M)	CWY Dimensions (M)	Strip Dimension (M)	RESA Dimensions,	Location/ description of arresting system	OFZ	Remarks
8	9	10	11	12	13	14
NIL	NIL	1979 x 280	92 x 60	NIL	NIL	NIL
NIL	NIL	1979 x 280	92 x 60	NIL	NIL	NIL

RWY designator	TORA (M)	TODA (M)	ASDA (M)	LDA (M)	Remarks
1	2	3	4	5	6
10	1859	1859	1859	1859	NIL
28	1859	1859	1859	1859	NIL

### TAPB AD 2.13DECLARED DISTANCES

### TAPB AD 2.14 APPROACH AND RUNWAY LIGHTING

RWY	APCH	THR	VASIS	TDZ, LGT	RWY	RWY edge	RWY End	SWY	Remarks
designator		LGT	(MEHT)	LEN	Centre line	LGT LEN,		LGT LEN	
	Туре	Colour	PAPI		LGT,	spacing	WBAR	(M)	
	LEN	WBAR			Length,	colour		colour	
	INTST	W D/ IIC			spacing,	INTST			
					colour, INTST				
1		2	4	_	-	7	0	0	10
1	2	3	4	5	6	1	8	9	10
10	White	Green	PAPI	Nil	Nil	1859M	Red	Nil	Nil
	High		L/3°			60M			
	Intensity		(50.0FT)			white, last			
	900		MEHT			600M			
						yellow			
28	Nil	Green	PAPI	Nil	Nil	1859M	Red	NIL	Nil
			L/3°			60M			
			(50.0FT)			white, last			
			MEHT			600M			
						yellow			

## TAPB AD 2.15 OTHER LIGHTING, SECONDARY POWER SUPPLY

1	ABN/IBN location, characteristics and hours of operation	ABN: AD FLG White 24 FPM
2	LDI location and LGT Anemometer location and LGT	LDI: lighted windsock on left side of RWY 10, 100.3M from THR, lighted windsock on left side of RWY 28, 97.8M from THR. ANEMOMETER: remote station on north side of RWY 10, 150M from CL
3	TWY edge and centre lighting	TWY A Edge: Blue, omnidirectional Centre line: NIL
4	Secondary power supply/switch-over time	Secondary Power Supply Switch over time 11.5 Sec
5	Remarks	NIL

### TAPB AD 2.16 HELICOPTER LANDING AREA

1	Coordinates TLOF or THR of FATO	NIL
2	TLOF and/or FATO elevation M/FT	NIL
3	TLOF and FATO area dimensions, surface, strength, marking	NIL
4	True and MAG BRG of FATO	NIL
5	Declared distances available	NIL
6	APP and FATO lighting	NIL
7	Remarks	Apron used for helicopter touchdown

#### TAPB AD 2.17 ATS AIRSPACE

1	Designator and lateral limits	BARBUDA FIS Circular area centered on 173715.89N/0614753.71W (ARP) within a 10NM radius
2	Vertical limits	SFC / 2000 FT AMSL
3	Airspace classification	G
4	ATS unit callsign Language(s)	Barbuda FIS English
5	Transition altitude	1500 FT
6	Hour of applicability	SR-SS
7	Remarks	Air Traffic Services provided by V.C. Bird APP/TWR

### TAPB AD 2.18 ATS COMMUNICATION FACILITIES

Service designation	Call sign	Channel(s)	SATVOICE number(s), if available	Logon address, as appropriate	Hours of Operation	Remarks
1	2	3	4	5	6	7
APP	Barbuda FIS	122.950MHZ	NIL	NIL	SR-SS	UNICOM, Approach Control Service provided by V.C. Bird APP/TWR 119.100MHZ
AWOS	Barbuda	131.875MHZ	NIL	NIL	SR-SS	AWOS 3P
	Barbuda Airport Operation	NIL	NIL	NIL	SR-SS	NIL

### TAPB AD 2.19 RADIO NAVIGATION AND LANDING AIDS

Type of Aid, Cat of ILS/MLS	ID	Frequency	Hours of operation	Position of transmitting antenna coordinates	Elevation of DME transmitting antenna	Svc Vol radius from GBAS Ref Point	Remarks
1	2	3	4	5	6	7	8
NIL	NIL	NIL	NIL	NIL	NIL	NIL	NIL

#### **IDENT AD 2.20 LOCAL TRAFFIC REGULATIONS**

#### 1. Airport regulation

#### 1.1 Airport Regulations/Restrictions

- 1. All traffic landing and departing TAPB must transmit a self-announced broadcast on frequency 122.950MHz.
- 2. \*All aircraft are required to land or depart on the active runway.
- 3. For arriving aircraft, all engines must be shut down prior to the deplaning of any passenger.
- 4. For departing aircraft, no engine shall be started until all passengers have boarded the aircraft.
- 5. All arriving and departing aircraft shall close or activate flight plans immediately on arrival and prior to departure according to the established procedures in TAPB AD 2.22.
- 6. All corporate, private and commercial aircraft operating into Barbuda International Airport (TAPB) must utilise the services of one of the approved Ground Handling Service Operators.
  - i) Corporate and private aviation (Fixed Based Operator Services) must utilise the services of an FBO Parking Location: West Apron Company Name: Dispatch Services Antigua Limited (FBO) Phone: 1-268-562-4148; 1-268-464-8501/4148 Email: dsa.bbq@dsaltd.info
  - ii) Commercial aviation must utilise the service of Express Handlers Limited Parking Location: Commercial Apron Company Name: Express Handlers Limited Phone: 1-268-484-1416 Email: <u>expresshandlerslimited@gmail.com</u>
- All aircraft operating into and out of Barbuda International Airport must have the required permit to operate, issued by the Antigua and Barbuda Air Transport Licensing Board. Contact: <u>ministry.pucate@gmail.com</u>

\*Note 1: The active runway is a runway that other aircraft are using or are intending to use for the purpose of landing or taking off.

\*Note 2: Should it be necessary for an aircraft to land on, or take off from a runway other than the active runway, it is required that the appropriate communciation between the pilot and other local traffic takes places to ensure that there are no conflicts.

#### 2. Taxiing

#### 2.1 Taxiing to and from stands

1. Arriving aircraft will be allocated a Gate Number by the Airport Operations.

### **IDENT AD 2.21 NOISE ABATEMENT PROCEDURES**

#### NIL

#### **IDENT AD 2.22 FLIGHT PROCEDURES**

#### 1. Procedures for IFR/VFR Flights

#### 1.1 General

- 1. All traffic wishing to operate into Barbuda from outside the V.C. Bird TMA and departing Barbuda for destinations outside the V.C. Bird TMA must file a flight plan with the V.C. Bird AIS via AFTN or email.
- 2. No flight plan is required for traffic wishing to operate within the V.C Bird TMA. However, information on the lfight shall be passed via telephone or on the frequency when airborne.
- 3. Ascertain by radio on the appropriate TAPB frequency 122.950MHz and by visual observation that no other aircraft or vehicle is likely to be a conflict with the aircraft during take-off.

Maintain a listening watch and follow the reporting procedures as outlined in this document.

#### 2. VFR Traffic

#### 2.1 VFR Arrivals Procedures

- 1. All arriving VFR traffic must report position, altitude, arrival procedure, intentions and estimated time of arrival prior to entering the area.
- 2. Pilots shall make position calls at each of the following points:
- a. 10 miles away from TAPB
- b. 5 miles away from TAPB
- c. 45 degree entry to the downwind
- d. Downwind
- e. Base
- f. Final
- 3. The traffic circuit in TAPB shall be flown at 1500ft or below.
- 4. \*All turns in the circuit shall be to the right for RWY 10 and left-hand circuit for RWY 28.

- 5. Aircraft shall approach the traffic circuit from the downwind side. However, if the pilot has positively determined that either there is no other traffic or that there will be no conflicting circuit traffic, aircraft shall join via crosswind for RWY 10 and base leg for RWY 28.
- 6. When joining the downwind, descend to cross abeam the threshold of the active runway in level flight at the published circuit altitude of 1500ft. Maintain that altitude until further descent is required for landing.
- 7. All descents should be made on the downwind side or well clear of the circuit pattern.

\*Note 1: NO UPWIND due to the BIRD SANCTUARY to the north of the airfield.

#### 2.2 VFR Departures

- 1. All VFR aircraft departing RWY 10 should climb on the runway heading until above 2000ft before commencing a right turn to an enroute heading. Departures wishing to make a left turn shall maintain runway heading until above 5000ft. Turns back toward the circuit or airport should not be initiated until the aircraft is at 2000ft or higher.
- 2. For aircraft departing RWY 28 right turns are prohibited to avoid the bird sanctuary.

#### 3. IFR Traffic

#### 3.1 IFR Departures

- 1. Options for all departures requesting IFR:
- a. Primary Option: Call on the ground in TAPB and request an IFR clearance with an ETD. This may be done via telephone or via a radio frequency. The controller shall issue an IFR clearance with a clearance expiry time.
- b. Report your intentions on the appropriate discrete TAPB frequency 122.950MHz before moving on to the acitve runway.

Please note it might take some time due to coordination procedures or airspace congestion, before the pilot can receive an IFR clearance.

#### 3.2 IFR Arrivals

- 1. All arriving IFR aircraft inbound to TAPB must continue on their current flight plan to the ANU VOR with clearance to proceed outbound on R005 ANU at 2500ft with clearance limit 20DME, then cancel IFR and descend to 2000ft into class G airspace. The aircraft shall proceed to join the traffic circuit at TAPB and follow the procedure for VFR arrivals (see section 2.1) into TAPB.
- 2. All arriving aircraft, IFR or VFR, shall close their flight plan once they have landed via the assigned frequency or designated phone line.

#### **IDENT AD 2.23 ADDITIONAL INFORMATION**

#### **1.** Bird concentrations in the vicinity of the airport

A frigatebird sanctuary is located in the northern part of the island. Occasionally, frigatebirds may be seen anywhere over the Barbuda Airport or offshore. Pilots are asked to remain vigilant.

### **IDENT AD 2.24 CHARTS RELATED TO AERODROME**

1.	Aerodrome/Heliport Chart	AD2.2-3-13
2.	Aerodrome Obstacle Chart – ICAO Type A RWY 10/28	AD2.2-3-15

#### IDENT AD 2.25 Visual Segment Surface (VSS)

Procedure	Procedure Minima	VSS Penetration		
1	2	3		
-	-	-		